

Sterno Pretzel Warmer

Instruction Manual






Model #6501



 **GOLD MEDAL**[®]
FUNFOOD EQUIPMENT & SUPPLIES

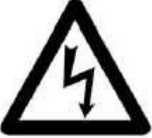Cincinnati, OH 45241-4807 USA

SAFETY PRECAUTIONS

	<p style="text-align: center;">⚠ DANGER</p> <p>Machine must be properly grounded to prevent electrical shock to personnel. Do NOT immerse the equipment in water.</p> <p>Always unplug the equipment before cleaning or servicing.</p>
	<p style="text-align: center;">⚠ WARNING</p> <p>ALWAYS wear safety glasses when servicing this equipment.</p>
	<p style="text-align: center;">⚠ WARNING</p> <p>Any alterations to this equipment will void the warranty and may cause a dangerous situation. NEVER make alterations to the equipment. Make sure all machine switches are in the off position before plugging the equipment into the receptacle.</p>
	<p style="text-align: center;">⚠ CAUTION</p> <p>Do NOT allow direct contact with this equipment and the general public when used in food service locations. Only personnel that are trained and familiar with the equipment should operate the equipment. Carefully read all installation instructions before operation.</p>
	<p style="text-align: center;">⚠ CAUTION</p> <p>This machine is NOT to be operated by minors. Minors are classified as anyone under the age of 18.</p>

NOTE

The information, specifications and illustrations contained in this manual represent the latest data available at time of publication. Right is reserved to make changes as required at the discretion of Gold Medal Products Company without notice.

INTRODUCTION

This manual covers the model # 6501 Sterno Pretzel Warmer.
Your Sterno Pretzel Warmer warranty is described on the back page of this manual.

CHECKING SHIPMENT

After unpacking, check thoroughly for any damage which may have occurred in transit. Claims should be filed immediately with the transportation company. The warranty also does not cover damage that occurs in transit or damage caused by abuse or consequential damage due to the operation of this machine, since it is beyond our control.

FUEL REQUIREMENTS

We recommend the use of "STERNO BRAND" "CANNED HEAT" cooking fuel, or equivalent. This type of fuel is a pink, jellied, ethanol- alcohol. Any other type of fuel may result in unsatisfactory performance.

OPERATING INSTRUCTIONS

Features and their Functions:

Water Pan:

Remove pan cover to fill this pan with water. This controls the humidity in the holding cabinet. If no humidity is desired, leave pan empty.

Seven Station Pretzel Rack:

This is the rack on which the pretzels are displayed. Two rows are left out to prevent burning of product and to improve circulation of heat.

Fuel Drawer:

The fuel drawer has an insert with three holes. One hole is to be positioned directly under the water pan while the remaining two are positioned under the heat vent holes on the operator right side of the unit.

Note: The fuel drawer insert must be in the fuel drawer and positioned as outlined above to achieve proper results


EASY STEPS FOR USING UNIT

Prepare Warmer for operation:

1. Pour enough water in the water pan to fill ½ inch deep.
2. Remove lids from "Sterno" canisters.
3. Pull fuel drawer open and place "Sterno" canisters in proper locations.
4. Light "Sterno" canisters per instructions on sterno canister, and close fuel drawer.
5. Load pretzels onto rack. Note: Frozen pretzels should be ready in approximately 45 minutes to 1 hour.
6. Check "Sterno" canisters periodically to ensure that they are still lit and functioning properly.

MAINTENANCE INSTRUCTIONS

	⚠ WARNING
	Adequate eye protection must be used when servicing this equipment to prevent the possibility of injury.

	⚠ CAUTION
	The following sections of this manual are intended for qualified service personnel only. They are not intended for the operator. Service issues should be handled by a qualified service technician.

CARE AND CLEANING

The stainless steel body of the Warmer is easy to keep clean. Usually a damp cloth will remove all dirt and grease spots. **NEVER USE ABRASIVES** on the stainless steel body. The glass should be cleaned on a regular basis to keep the glass clean and sparkling.

ORDERING SPARE PARTS

1. Identify the needed part by checking it against the photos, illustrations, and/or the parts list.
2. When ordering, please include part number, part name, and quantity needed.
3. Please include your model name, serial number, and date of manufacture (located on the machine nameplate) with your order.
4. Address all parts orders to:

Parts Department
Gold Medal Products Co.
10700 Medallion Drive
Cincinnati, Ohio 45241-4807

or, place orders at:
(800) 543-0862
(513) 769-7676
Fax: (513) 769-8500
E-mail: info@gmpopcorn.com
Web Page: www.gmpopcorn.com

The parts shown in the following photographs and parts list reflect the most common replaced and/or lost parts on the machine. If parts are needed, that are not shown, please contact our parts department at the above number.

© The text, descriptions, graphics and other material in this publication are the proprietary and exclusive property of Gold Medal Products Company and shall not be used, copied, reproduced, reprinted or published in any fashion, including website display, without its express written consent.

 
 
Parts Breakdown – Front View




Parts Breakdown – Rear View



Parts Breakdown – Inside Cabinet

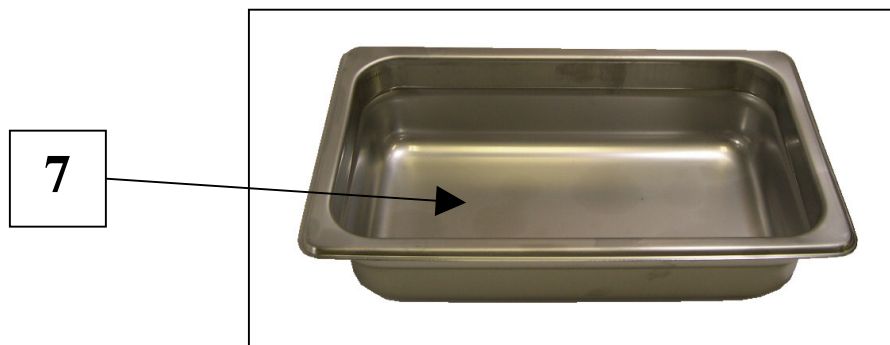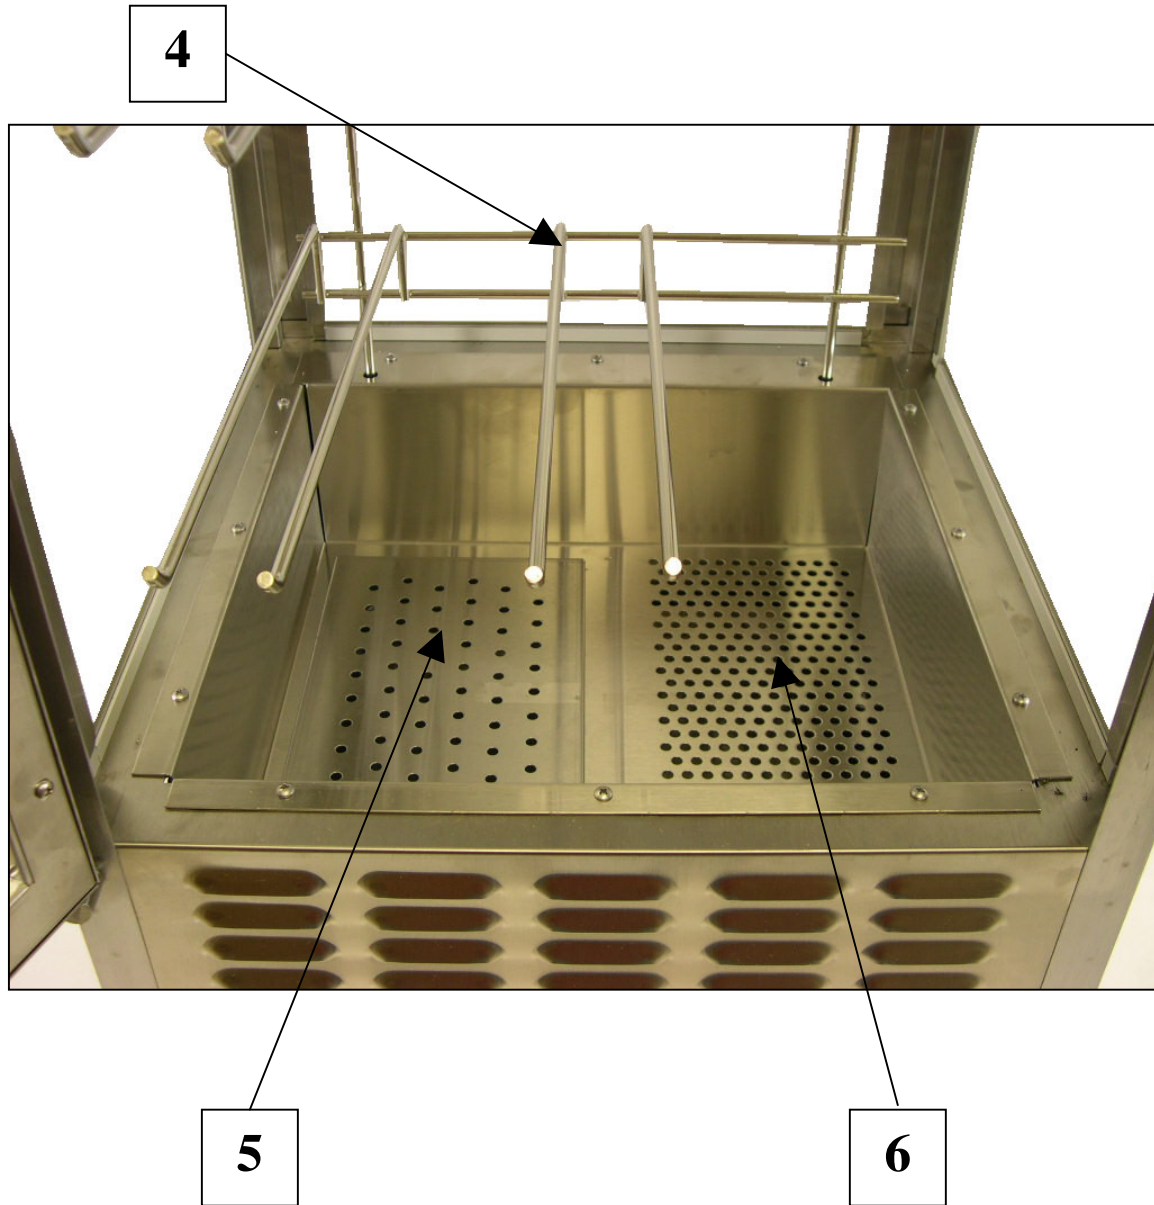

Parts Breakdown – Drawer Components

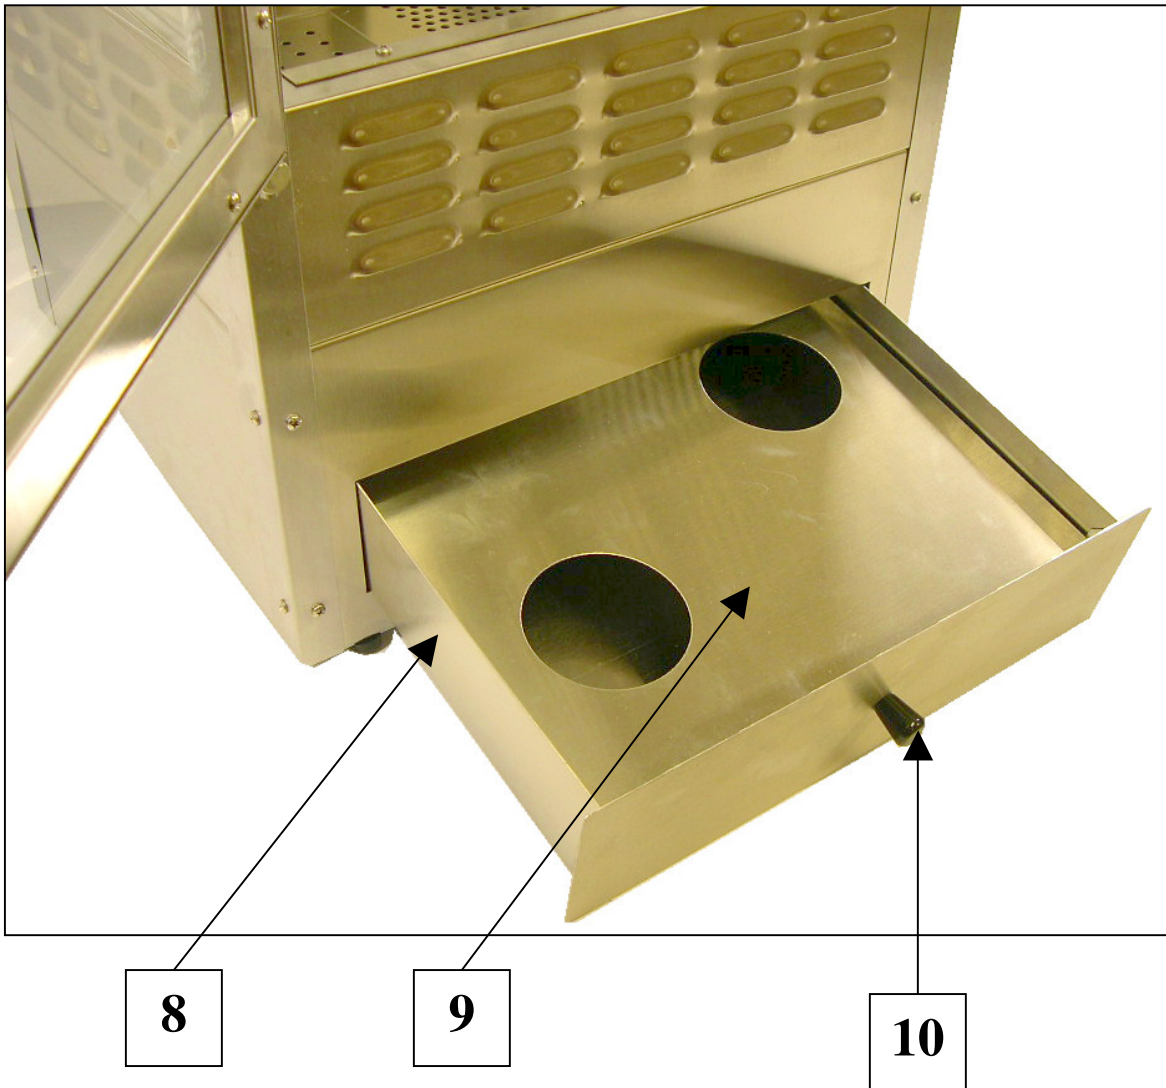 

Parts List

Item #	Part Number	Description
1	43295	Pretzel Decal
2	42627	Hinge Pin
3	87247	Rubber Foot
4	49980	Pretzel Rack
5	42621	Pan Cover
6	49984	Inner Pan
7	42614	Water Pan
8	49998	Drawer Weldment
9	49987	Drawer Insert
10	47120	Knob

WARRANTY

WE WARRANT to the original purchaser the Gold Medal equipment sold by us to be free from defects in material or workmanship under normal use and service. Our obligation under this warranty shall be limited to the repair or replacement of any defective part for a period of six (6) months from the date of sale to the Original Purchaser with regard to labor and two (2) years with regard to parts and does not cover damage to the equipment caused by accident, alteration, improper use, voltage, abuse, or failure to follow instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. We neither assume, nor authorize any other person to assume for us, any other obligation or liability in connection with the sale of said GOLD MEDAL equipment or any part thereof.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS COMPANY, or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS COMPANY AT 1-800-543-0862 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.



GOLD MEDAL PRODUCTS COMPANY

10700 Medallion Drive

Cincinnati, Ohio 45241-4807 USA

www.gmpopcorn.com

Phone: 1-800-543-0862

Fax: 1-800-542-1496

© The text, descriptions, graphics and other material in this publication are the proprietary and exclusive property of Gold Medal Products Company and shall not be used, copied, reproduced, reprinted or published in any fashion, including website display, without its express written consent.